
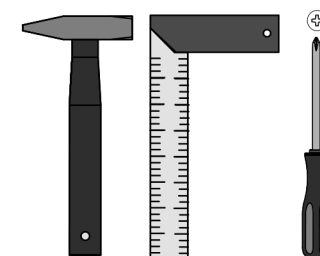


INSTRUÇÕES DE MONTAGEM INSTRUCCIONES DE ARMADO ASSEMBLY INSTRUCTIONS

**REF.: 2657/2674
2687**

A line drawing of a dresser unit. It features five drawers on the left side, each with a circular knob. To the right of the drawers is a cabinet door with a semi-circular mirror and a rectangular mirror below it. A small circular knob is located on the edge of the cabinet door. The unit has a flat top and a baseboard.

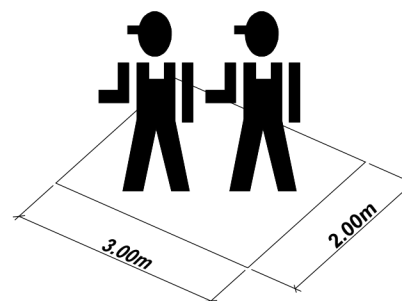

Ref-2657/2674/2687 - 02/Julho/2018 - Rev 03



LISTA DE FERRAGENS / LISTA DE MATERIALES / HARDWARE LIST

Utilizar a régua abaixo para medir as ferragens:





A		Tampa Adesiva Papel	10
B		4,0 x 40	10
D		3,5 x 35	22
E		3,5 X 12	98
H		6,0 x 30	34
BX		COLA	01
DX		Suporte Prateleira	04
Y		10 x 10	40
AE			07
AA			02
EF			06
BW		4,0 x 25	09
CA		Corrediça telescópica 350mm (Par)	04
K		Fixador p/ acrílico	06
AT		Cantoneira	14
PX		Puxador	09
EA			02
K		4,0 x 40	01
P		3,5 X 12	01
CT		Cantoneira	01
X		Bucha Ø6mm	01

Passo
Paso
Step
05

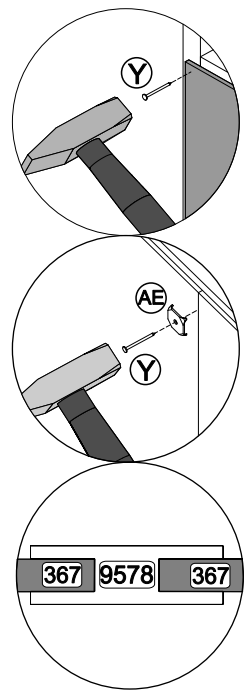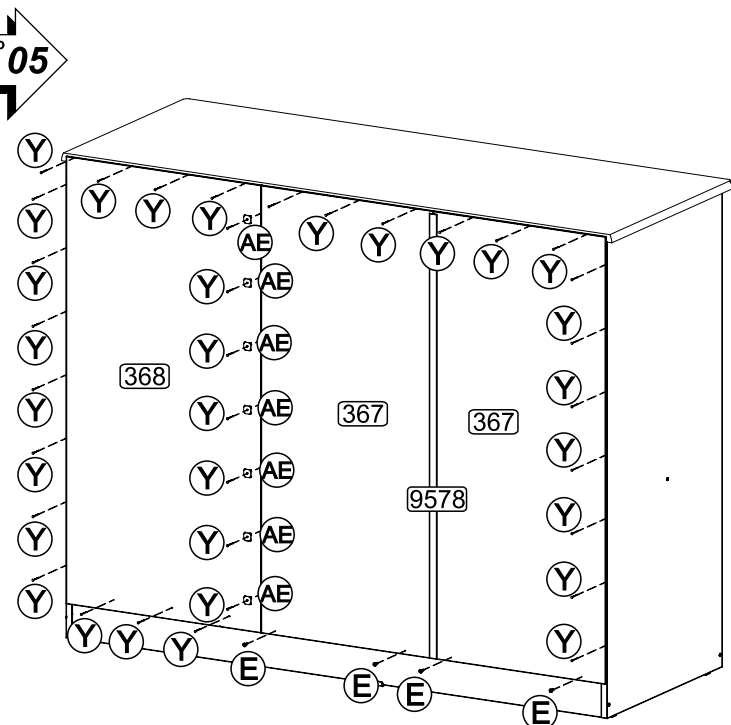



Passo
Paso
Step
06

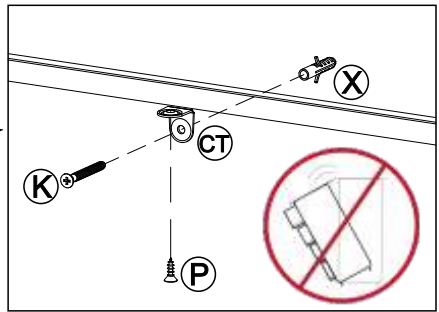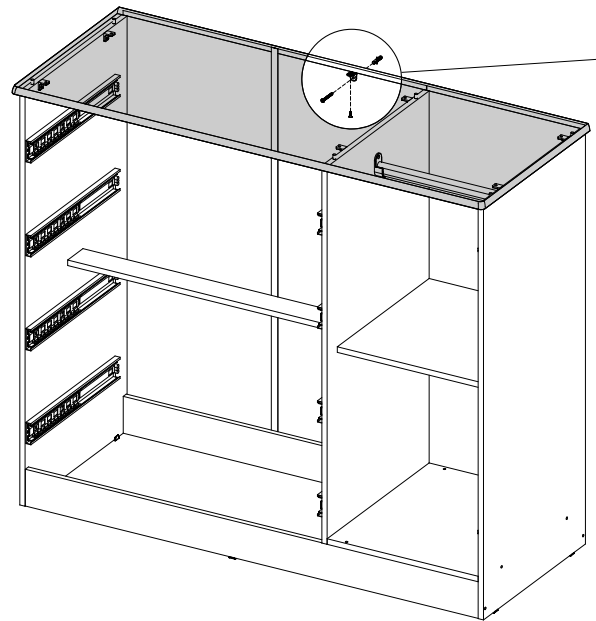

Sistema anti-tombamento
Fixar a cantoneira (CT) com o parafuso (P), no tampo. Após, encostar a cômoda na parede e utilizar o parafuso (K), para furar o fundo e fixar na parede com a bucha plástica (X).

Sistema anti-inclinación
Fijar la esquina (CT) con el tornillo (P), en la tapa. Después de, colocar la cómoda en la pared y utilizar el tornillo (K), para pegar el fondo y fijar en la pared con el casquillo plástico (X).

Anti-tipping system
Secure the angle bracket (CT) with the screw (P) on the top. Then lay the dresser on the wall and use the screw (K) to drill the bottom and fix it to the wall with the plastic sleeve (X).

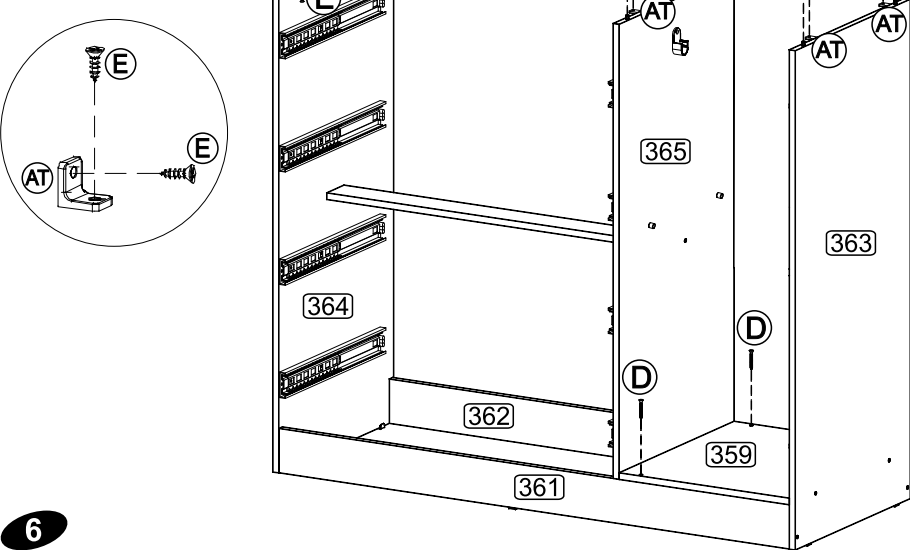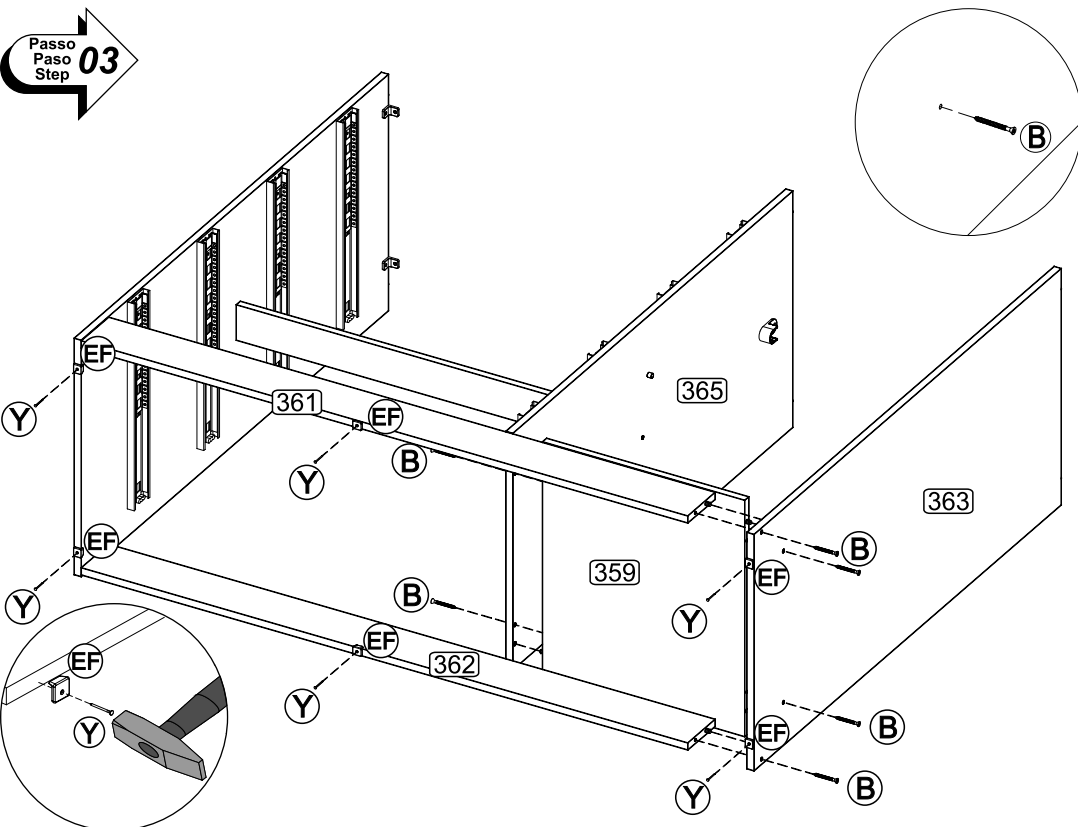


Senhor montador!
Informamos que a numeração das peças encontra-se no topo das mesmas conforme desenho acima.

Señor Armador!
Les informamos que la numeración de las piezas encuentranse arriba de las mismas, de acuerdo al modelo arriba.

Dear Assembler!
We inform you that the number of each piece is located on the top of it, according to the model shown above.

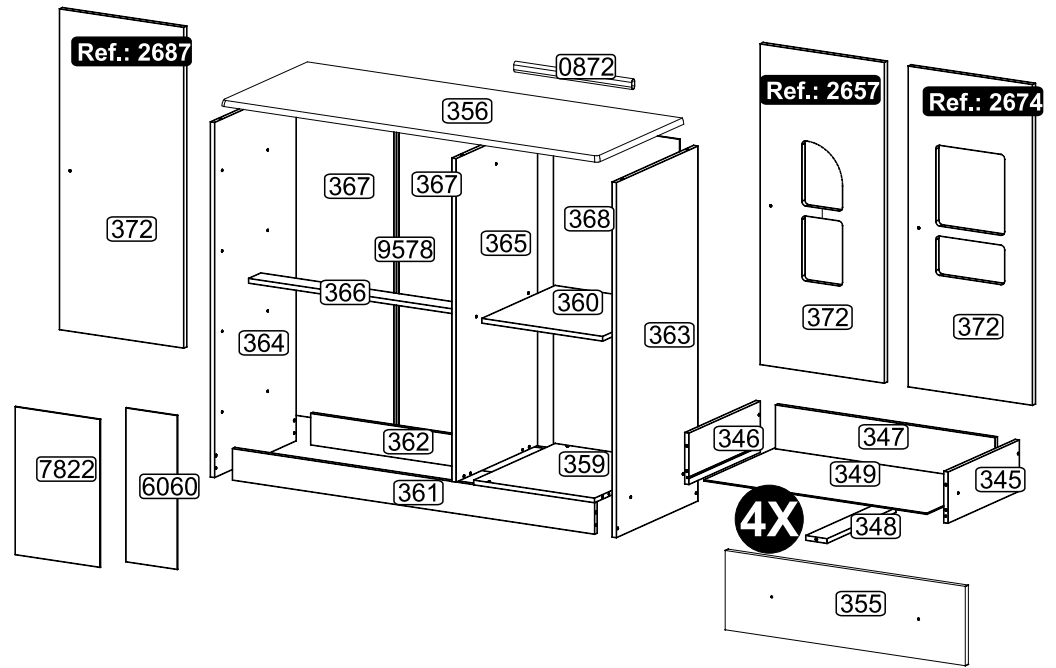

POR

ESP

ENG

LISTA DE PEÇAS

Nº	DENOMINAÇÃO
345	- LATERAL GAVETA DIREITA
346	- LATERAL GAVETA ESQUERDA
347	- COSTA DE GAVETA
348	- TRAVESSA P/ GAVETA
349	- FUNDO DE GAVETA
355	- FRENTE DE GAVETA
356	- TAMPO
359	- BASE
360	- PRATELEIRA MOVEL
361	- RODAPÉ FRONTAL
362	- RODAPÉ TRASEIRO
363	- LATERAL DIREITA
364	- LATERAL ESQUERDA
365	- DIVISÃO
366	- TRAVESSA
367	- COSTA
368	- COSTA LATERAL
372	- PORTA
0872	- CABIDEIRO
9578	- PERFIL I
6060	- ACRÍLICO INCOLOR
7822	- ACRÍLICO INCOLOR

LISTA DE PIEZAS

Nº	DENOMINACIÓN
345	- LATERAL CAJÓN DERECHA
346	- LATERAL CAJÓN IZQUIERDA
347	- RESPALDO CAJÓN
348	- BANDEJA P/ CAJÓN
349	- FONDO CAJÓN
355	- FRENTE CAJÓN
356	- TAPA
359	- BASE
360	- ESTANTE MOVIL
361	- ZÓCALO FRONTAL
362	- ZÓCALO POSTERIOR
363	- LATERAL DERECHA
364	- LATERAL IZQUIERDA
365	- DIVISIÓN
366	- TRAVIESA
367	- RESPALDO
368	- RESPALDO LATERAL
372	- PUERTA
0872	- PERCHA
9578	- PERFIL I
6060	- ACRILICO INCOLOR
7822	- ACRILICO INCOLOR

PART LIST

Nº	DESCRIPTION
345	- RIGHT DRAWER SIDE
346	- LEFT DRAWER SIDE
347	- DRAWER BACK
348	- DRAWER BEAM
349	- BOTTOM CAJÓN
355	- FRONT DRAWER
356	- TOP
359	- BASE
360	- MOVABLE SHELF
361	- FRONT SKIRTING BOARD
362	- BACK SKIRTING BOARD
363	- RIGHT SIDE
364	- LEFT SIDE
365	- DIVISION
366	- CROSS BAR
367	- BACK
368	- SIDE BACK
372	- DOOR
0872	- HANGER
9578	- I PROFILE
6060	- ACRYLIC COLOR
7822	- ACRYLIC COLOR

PRÉ-MONTAGEM / PRÉ-ARMADO / PRÉ-ASSEMBLAGE

